


SCHÖNOX PARKETT 52

Elastic, waterless special adhesive for parquet in tubular bags

suitable for bonding all types of parquet on suitable substrates in interior areas as well as in rooms with expected fluctuations in room climate.



DIN
18 356

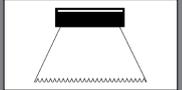

Product characteristics

- approved by the building authorities
- Emission tested building product according to ABG - approval no. Z-155.10-499
- EMICODE EC 1^{PLUS}: very low emission
- parquet adhesive filled in unipack
- processing with Dispenser
- solvent-free according to TRGS 610
- fulfills the requirements of EN 14 293
- consumption-optimized
- on many substrates no priming required
- fast development of strength
- waterfree, no expansion of wood
- optimum ridging
- soft adhesive ridge
- suitable for application on subfloor heating systems
- impact sound reducing
- low odour
- one component
- ready for use
- no waiting time
- long open time

Applications

SCHÖNOX PARKETT 52 is suitable for bonding of:

- block parquet, strip parquet (≥ 15 mm thickness)
- mosaic parquet, lamparquet (see instructions)
 - vertical finger parquet ($l \geq 160$ mm, $w \geq 8$ mm, $t \geq 22$ mm)
- multi-layer parquet elements - double layer up to 1500 mm or triple layer parquet up to 2400 mm length - according to EN 13 489
- solid hardwood boards ≥ 15 mm thickness (thickness / width ratio max. 1:8) up to 1200 mm length
- smoked oak (free of hurtful residual ammonia)
- SCHÖNOX insulation and uncoupling underlayments

on absorbent and non absorbent substrates in interior areas

- For the gluing of solid olive parquet and thermal treated parquet we recommend SCHÖNOX PARKETT 610.
- Not suitable for parquet floors in industrial areas with hand-lift or fork-lift traffic.

Requirements of substrate

- Adequate strength, evenness, dimensional stability and dryness.
- Free of residues which reduce adhesion, e.g. dust, dirt, oil, fat and loose particles.
- Surface treatments or any "friable" areas of the subfloor must be mechanically removed and the subfloor repaired with SCHÖNOX leveling compounds as required.
- Old adhesive residues and levelling layers with no sufficient hardness should be removed completely by suitable mechanical means.
- The requirements of DIN 18 356 "Parquet work" are applicable.
- For straight edged parquet species and for parquet units > 800 mm length, substrate should have an evenness tolerance according to DIN 18 202 of ≤ 2 mm/m.
- For massive parquet floating laid chip-board/OSB-boards should be laid in two layers, bonded and screwed with lateral offset (at least twice as thick as the used parquet)
- on mineral substrates SCHÖNOX HP RAPID can be used in one layer to bind adherent residual dust before laying parquet (drying time mind. 2 hours).
- Mastic asphalt screeds, resistance to indentation class IC 10 and IC 15, should be primed with a single-layer SCHÖNOX HP RAPID (Drying time min. 2 hours).
- Rooms in buildings without a basement, are to be sealed against rising

Technical data

- Basis: i-Cure[®] technology Polyurethan in tubular bags
- Color: light brown
- Density: 1,3 kg/l
- Storage temperature: not below + 5 °C
- Application temperature: not below + 18 °C, not above 65 % rel. air humidity
- Material consumption:
 - blast pipe 290/3,5 mm appr. 800 g/m²
 - blast pipe 380/3,0 mm appr. 1000 g/m²
- Waiting time: none
- Skin formation: after approx. 60 min
- Open time: approx. 60 min
- Setting time: approx. 24 hours
- Further processing of the wood: after 24 to 48 hours¹

All values are approximate, are subject to local climatic fluctuations and vary according to the absorbency of the substrates and the applicator device.

¹With adjusted relation of humidity of the wood to humidity in the air at the site possible



SCHÖNOX PARKETT 52

dampness in compliance with the standard.

- Refer to the parquet manufacturer's technical product information for parquet substrate requirements.
- The requirements of the relevant valid standards, guidelines and data sheets apply.

Recommended method of working

- SCHÖNOX PARKETT 52 is ready for use.
- Parquet that is bonded with SCHÖNOX PARKETT 52 should be conditioned and requires a wood humidity corresponding to the medium seasonal climate of 20 °C and 50 % rh (normally wood humidity at average 9% ± 2% for single bars; multi-layer parquet 8 % ± 2%, wood block 8 to 12%).
- The moisture content of massive parquet should be detected before laying according to EN 13 183-2.
- For laying parquet there is an optimum room climate - room temperature > 18 °C, relative humidity < 65 % - assumed. As a basic rule applies: room climatic laying conditions = room climatic using conditions. With a wood humidity of normally 9 % a room temperature of 22 °C and a relative humidity of approx. 50 % is necessary. This equates to the wood-physical laws and the optimal climate for parquet floors.
- Apply the adhesive evenly with SCHÖNOX Dispenser 1800 to the substrate. If wetting is insufficient slow down the spreading speed.
- Apply only as much adhesive as can be laid with parquet within 60 min.
- Lay the parquet directly into the adhesive with light sliding. Tap it firmly and, if necessary weigh it down. Ensure adequate wetting. If wetting is insufficient, take toothing next in size.
- The distance between the wall and the parquet to be laid should be, depending on the kind of parquet and the kind of wood, at least equal to the thickness of the material.
- Sand and seal not before the adhesive is fully cured.

Packaging

- 1800 ml unipacks (6 pieces in a box)
- 600 ml unipacks (20 pieces in a box)

Storage

- Store SCHÖNOX PARKETT 52 in cool, dry, frost-free conditions.
- Storage life of 1 year (in closed packaging).
- Opened packages should be closed immediately and used up as soon as possible.
- Remove any skin that has formed, do not stir in.

Disposal

- Empty packaging completely and dispose of in accordance with regulations
- For the disposal of product residues, waste water and containers with adherent product residues please follow the local governmental regulations.

EMICODE

- EC 1^{PLUS}: very low emission

GISCODE

- RU 0,5 - identification-free, solvent-free polyurethane adhesive / primer

EPD - Self-declaration

- Sika Deutschland GmbH declares that the product fulfills the criteria of one Environmental Product Declaration acc. to ISO 14025 and EN 15804
- Declaration available for download at www.schoenox.com at SCHÖNOX PARKETT 52

Instructions

- When laying parquet without tongue and groove, please ensure complete wetting. Primarily at the ends, inadequate wetting can lead to moving of the parquet planks on the elastic adhesive ridge. After laying and a waiting time of appr. #1# minutes roll the parquet with a roller. It might be necessary to level the substrate to achieve adequate evenness.
- A strong increase of wood moisture of massive parquet can lead to irreversible deformation.

- Take care to ensure that no adhesive is squeezed between the parquet elements and comes into contact with oils or wood varnish. Carefully insert each element in to the adhesive bed and press evenly.
- Clean tools immediately after use with SCHÖNOX FIX CLEAN.
- Wipe off impurities on sealed surfaces immediately and remove residual bloom with a suitable cleaning agent (e.g. SCHÖNOX FIX CLEAN).
- Hardened material can only be removed mechanically.
- Follow the parquet manufacturer's laying instructions. If in doubt, we recommend testing a small area.
- The product data sheets of further add-on products should be observed.

SCHÖNOX PARKETT 52

The applicable recommendations, guidelines, DIN regulations and safety data sheets are to be observed, together with the recognised architectural and engineering regulations. We guarantee that our products leave the factory in perfect condition. While our recommendations for use are based on tests and practical experience, they can only provide general guidance without any assurance as to product characteristics, since we have no influence over the conditions on site, the execution of the work or the method of processing. This product data sheet supersedes all previous editions.



The Sika management system is certified to ISO 9001 and 14001 by SGS

Sika Deutschland GmbH

Subsidiary Rosendahl

P.O. Box 11 40

D-48713 Rosendahl / Germany

Phone +49 (0) 2547-910-0

Fax +49 (0) 2547-910-101

E-mail: info@schoenox.de

www.schoenox.com